


IT- 8500 Series Installation Guide

MASSAGE CHAIR ASSEMBLY

A. Attaching the Armrests

- A1. Remove the main body of the massage chair from its packaging. Locate the two armrests and remove all plastic covering.

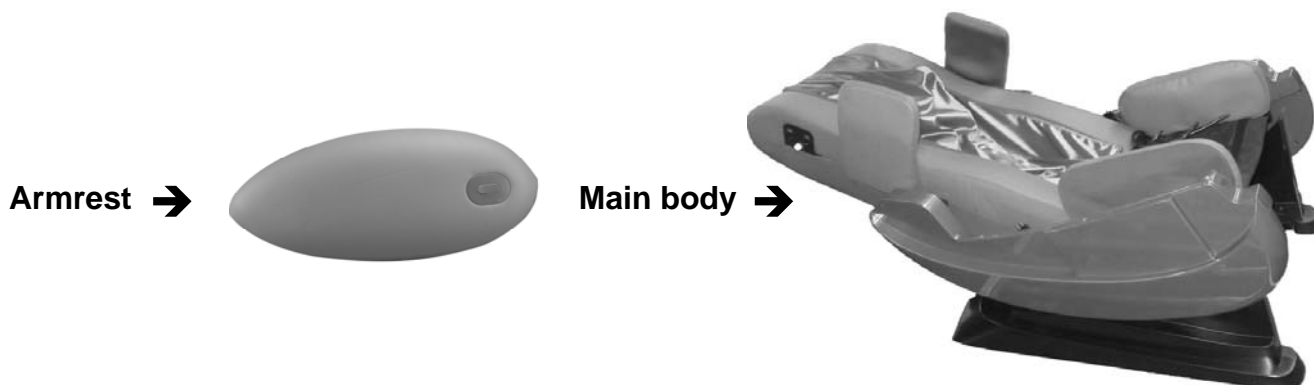

- A2. Locate the three holes (circled in red in the picture) at the base of the left armrest, attached to the chair.



* Although there is a hole, please disregard the one circled in black.

- A3. Look in the carton to locate the three identical screws depicted here:



(top view)



(side view)



(inverse view)

- A4. Fit the three screws mentioned in step A3 into the three holes mentioned in step A2. Be sure the screw is positioned with the + & - at the top so that the screw is positioned exactly as shown in the illustration.



IT- 8500 Series Installation Guide

- A5. Locate the three bolts already partially inserted along the top of the left armrest. Align these three bolts with the holes depicted in A2 but do not fully set the arm rest onto the chair body.




- A6. Align the arm rest air hoses with the white connectors on the body of the chair with the air hose ports on the bottom of the arm rest and plug into place. Push with significant pressure to ensure they are fully seated into place. Be sure to push all of the excess air hose slack down into the base. This is CRITICAL to prevent air line kinking and the chairs proper function.



- A7. Align these three bolts with the holes depicted in A2 and set the arm rest onto the body of the chair.




- A8. Check to confirm that the armrests are well-assembled. Then rotate the screw 90° clock-wise.

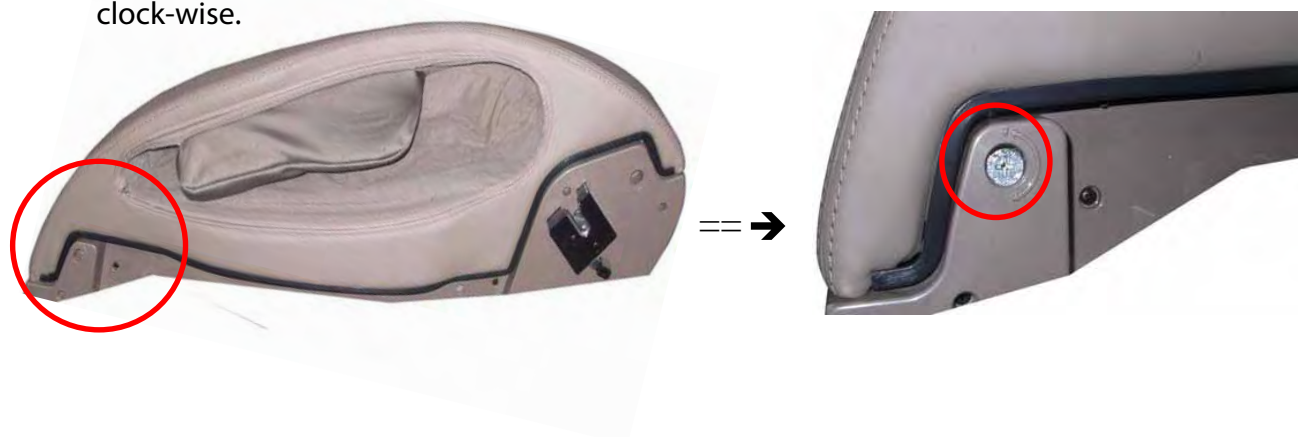

IT - 8500 Series Installation Guide

A9. Upon completing of assembling the left armrest, repeat the same process to assemble the right armrest.

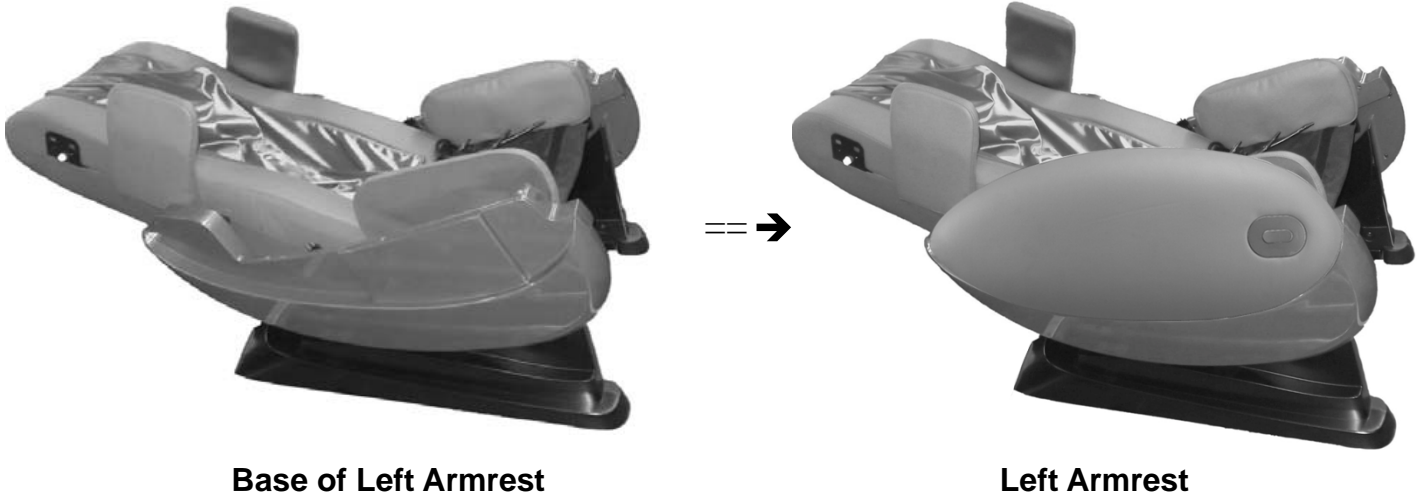


B. Assembling the Legrest

B1. Locate the Legrest and remove it from its packing box. Open the Legrest.

Legrest →



B2. Position the Legrest in front of the main body of the massage chair. Insert the cable first, then insert the air hose into their appropriate slots.

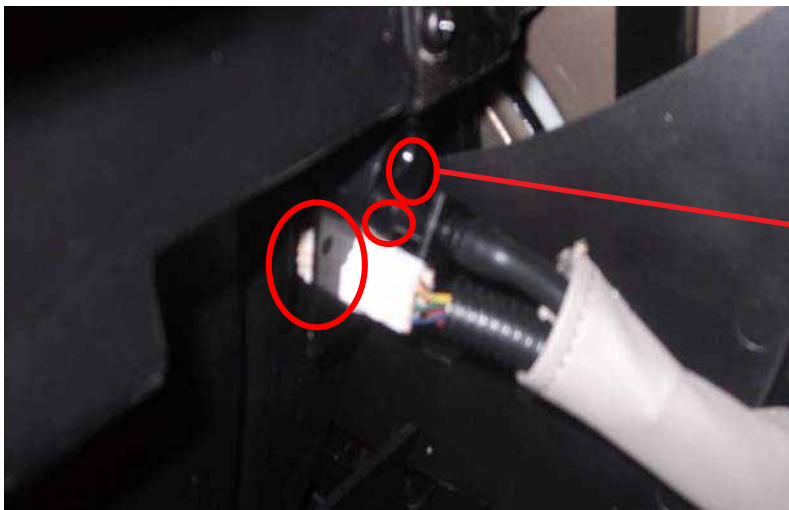


* The air hose should be inserted into the bottom air hose opening slot shown here.

IT - 8500 Series Installation Guide

- B3. On the top right and left of the leg rest are two bolting points. Insert a hex screw through the bolting point to fasten one side of the leg rest to the body of the massage chair. Repeat this procedure for the other side of the leg rest.



- B4. While looking at the chair from the front there are three air hoses in the back left of the backrest that need to be connected. Both ends of the air hoses are numbered. Connect the matching hose number to each other, 5 to 5, 6 to 6 and 11 to 11.

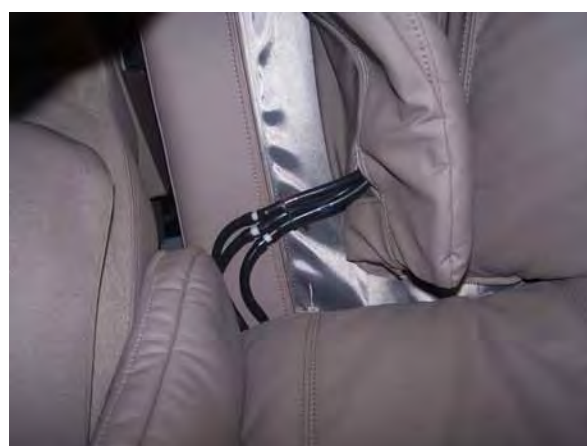

- B5. While looking at the chair from the front there is one air hose and one power connection in the back right of the backrest that need to be connected. Connect the air hose 12 to 12 and connect the power cable as shown



- B6. Place the other parts of the massage chair (seat cushion, back cushion, head cushion, etc.) onto the main body of the chair.



C. Connecting the Speakers

- C1. Locate the speakers and remove them from their packaging.



IT - 8500 Series Installation Guide

C2. The Speakers & Shoulder Massagers are Labeled L & R.



C3. Connect the White Speaker Connector from the Speaker to the White Connector on the Chair.



C4. Insert the three joint pins in the Shoulder Massager and Speaker into the Three Connecting Tubes in the Backrest.



Three Connecting Tubes

IT - 8500 Series Installation Guide

- C5. After the Joint Pins are fully inserted, move down the slider to expose the Locking Screw. Tighten the screw and move back the slider.



- C6. Assemble the controller and its stand.

- C7. Insert the power plug into a power outlet. Turn on the power switch.



Your massage chair is ready for use.